

“Pressure not working” => Possible causes:

| State | Power Button | USB-Cable | Windows USB / Driver | LED1 (left) | LED2 (mid) | LED3 (right) |
|-------------------------------|-------------------|-------------------------------|-----------------------------|-------------|-------------|--------------|
| <i>Old firmware</i> | On | # | # | ON | # | # |
| <i>Unknown plate/firmware</i> | On | Connected | # | OFF | # | Constant ON |
| <i>Unknown plate/firmware</i> | On | Connected | Installed | OFF | PULSE (1/s) | # |
| <i>Connected Bluetooth</i> | On | Connected | Installed | # | PULSE (1/s) | # |
| | | | | | | |
| <i>Not working</i> | On | Connected | Not installed / Not working | OFF | OFF | PULSE (1/s) |
| <i>Not working</i> | On | Not connected / Cable damaged | # | OFF | # | OFF |
| <i>Not working</i> | Off / Not pressed | # | # | OFF | # | OFF |

=> field not relevant for the state/problem

Pressure-Plate is working => Hardware is OK:

| State | Power Button | USB-Cable | Windows USB / Driver | LED1 (left) | LED2 (mid) | LED3 ** (right) |
|------------------------------------|--------------|-----------|----------------------|-------------|-------------|-----------------|
| <i>Connected USB-Driver</i> | On | Connected | Installed | OFF | ON | PULSE (1/s) |
| <i>Connected USB+Transmitting*</i> | On | Connected | Installed | OFF | PULSE (5/s) | PULSE (1/s) |

Notes:

* => Pulsing only starts if data is actually transmitted = Someone is standing on the plate

** => During start-up LED3 is constantly on but **only for 5 seconds**, after that it starts pulsing slowly (1x per second)