

Windows Power options for lightbeam (Windows 10)

For optimal performance and smooth operation, the Windows power options need to be configured accordingly.

Note:

For laptop user we strongly advise **to always use external power supply**.



Especially during the lightbeam operation the power supply must not be switched to battery power!

Step-by-step guide


1. Open the Windows search dialogue
e.g. by pressing the according button with the *Windows-logo* on your keyboard:



2. Type in the search term "**Power options**" and select the according item.
3. Look for the additional power settings

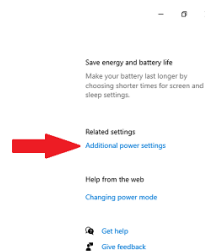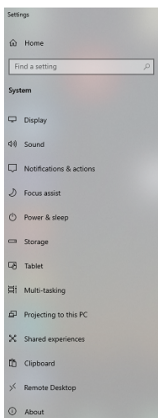

4. In the following dialogue make sure the entry "**High performance**" is selected!

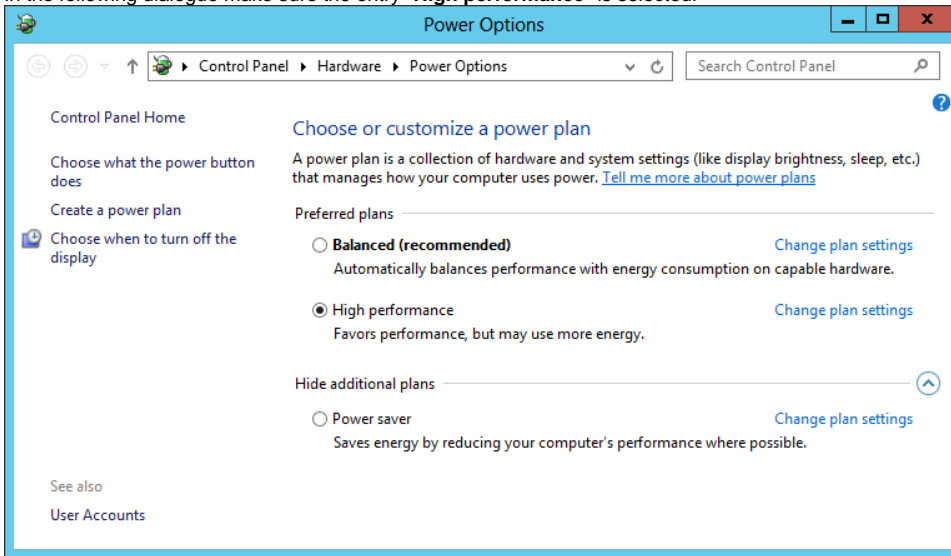

Related articles

- [Manually installing the pressure driver \(TexiSense\)](#)
- [Windows Power options for lightbeam \(Windows 10\)](#)
- [Windows 10 Taskbar / Taskleiste](#)